

# **KMP**

**DRIVETRAIN  
SOLUTIONS**



## **Installation Manual**


KMP Magnetic Paddles

01.04.20500 - Porsche 991-718

## 1. Remove steering wheel

### Step 1


Necessary preliminary tasks:  
Disconnect battery negative lead

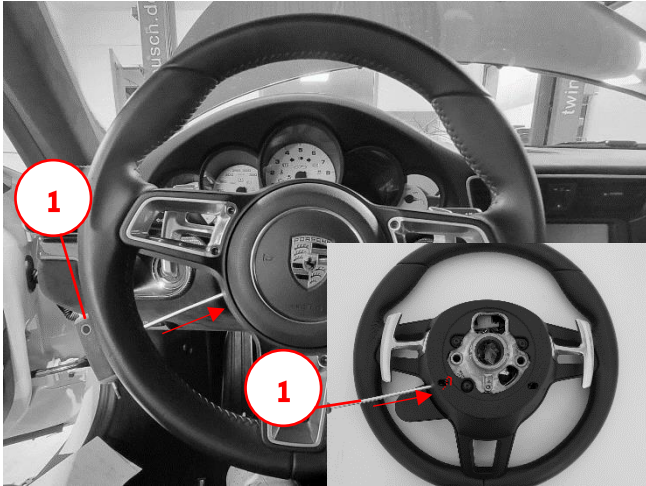

### Step 2

Insert Torx screwdriver T20 (1) straight into an opening on the steering wheel. Until a spring resistance can be felt. Press in wire spring clip with Torx screwdriver T20 (1) in direction of arrow until the airbag unit is unlocked.

Repeat the procedure on the other side of the steering wheel and carefully raise the airbag unit.

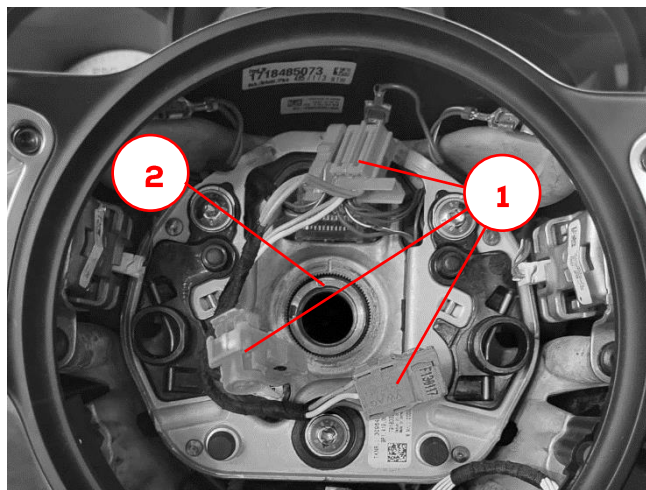

### Step 3

Tilt airbag unit forwards. Disconnect plug connections (1) and remove airbag unit.

**Warning!**  
**Risk of injury!**


Airbag unit may only be set down with the airbag itself facing upwards.

Remove the bolt in the center of the steering wheel (2) with Torx T55 and remove steering wheel.

## 2. Remove paddles


### Step 1

Disconnect plug connections (1) on the backside of the fitted paddle shifters on both sides of the steering wheel.

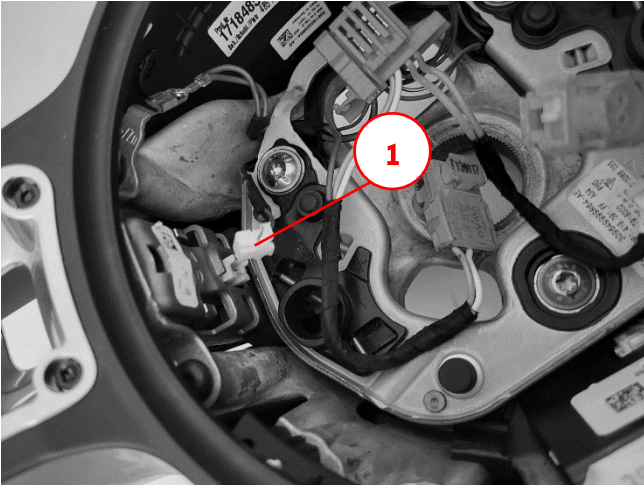


### Step 2

Release the screws (1) with Torx screwdriver T20 and take off the back cover of the steering wheel.

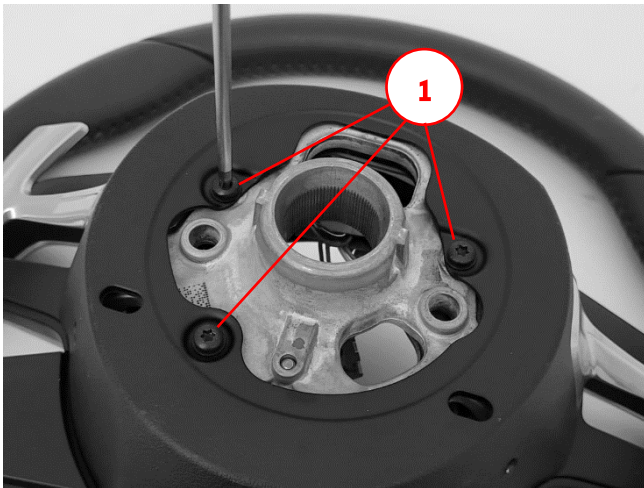


### Step 3

Release the screws (1) with Torx screwdriver T20.

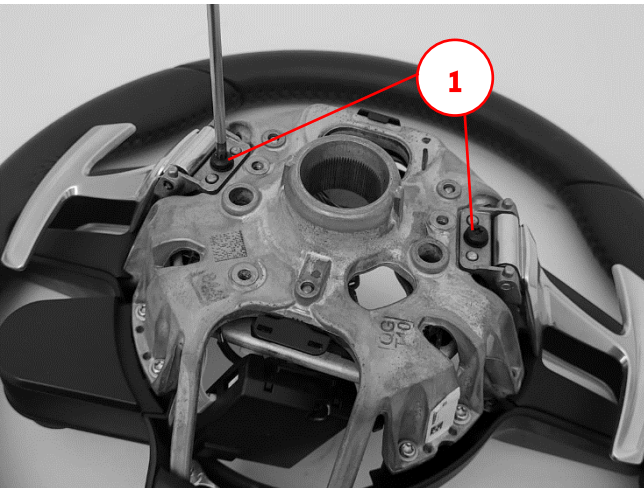

### Step 4

Take out the shift paddles by pulling them in the direction shown.

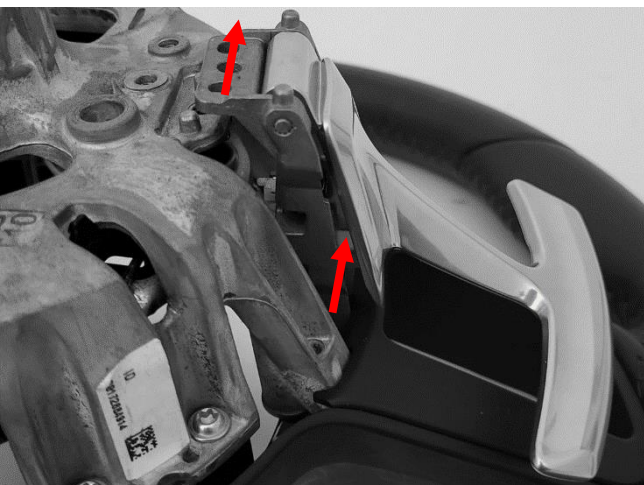


### 3. Install paddles

#### Step 1


Place the KMP magnetic paddle shifters in corresponding sides of the steering wheel.

Make sure shift paddles are correctly seated.

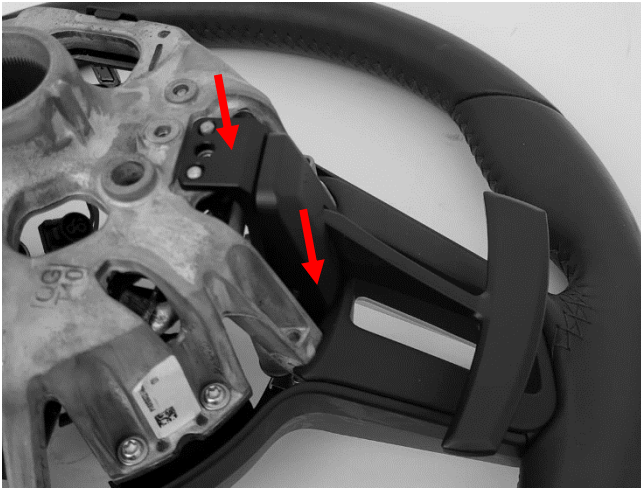

#### Step 2

Mount the previously unscrewed screws (1). Use Torx screwdriver T20 and Loctite 243 (medium threadlocker).

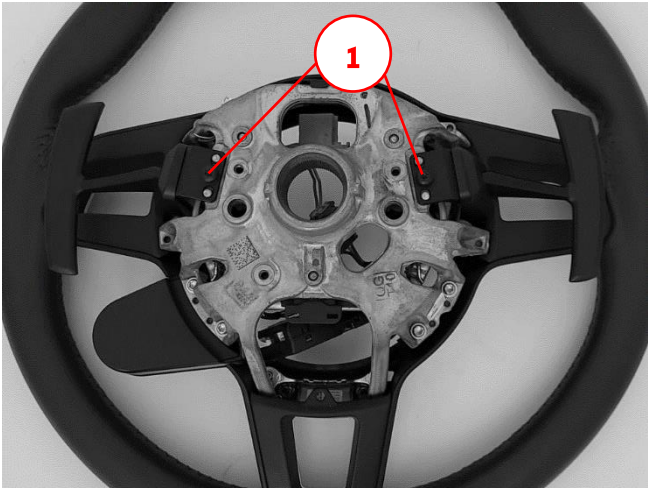

#### Step 3

Reposition the back cover of the steering wheel and mount the previously unscrewed screws (1). Use Torx screwdriver T20 and Loctite 243 (medium threadlocker).




#### Step 4

Connect plug connections (1) of both KMP magnetic paddle shifters.

Note:


Make sure the plugs are properly seated and secured by the latch.

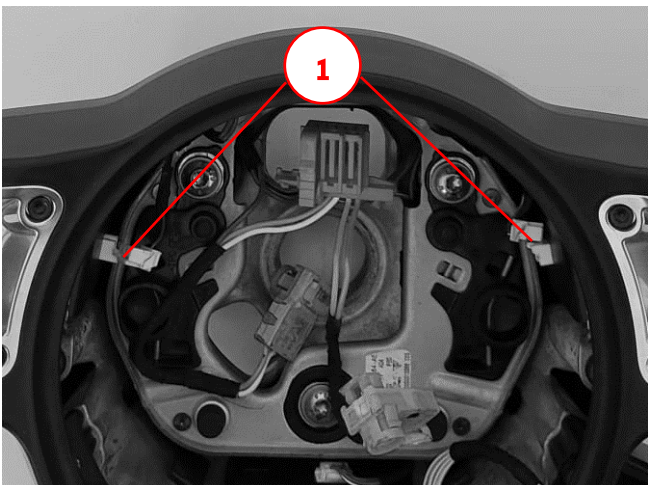

## 4. Mount steering wheel

### Step 1

Connect plug connection (1) and mount the previously unscrewed center bolt (2). Use Torx T55 and Loctite 243 (medium threadlocker)

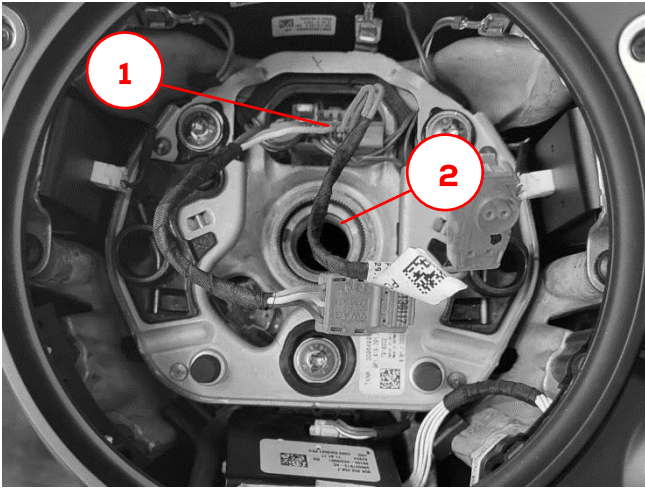

### Step 2

Position airbag in front of the steering wheel and reconnect plug connections to the airbag.



### Step 3

Gently push back in the airbag. You should feel a spring click which is locking the airbag unit.

### Step 4

Connect negative battery lead.



If there are any technical issues, please contact [support@kmpdrivetrain.com](mailto:support@kmpdrivetrain.com).

Let us follow your project by using [#kmpdrivetrain](https://www.instagram.com/kmpdrivetrain) on y our social media channels!



**Kmp**  
**DRIVETRAIN  
SOLUTIONS**

Opaalstraat 34  
7554TS Hengelo  
the Netherlands

Phone: +31 (0) 85 043 8310  
Web: [www.kmpdrivetrain.com](http://www.kmpdrivetrain.com)  
E-mail: [sales@kmpdrivetrain.com](mailto:sales@kmpdrivetrain.com)